

**Supporto mobile per aste tonde - Mobile support for round rods - Support mobile pour des tiges rondes - Soporte móvil para barras redondas - Mobile-Unterstützung für Rundstäbe  
- Mobiele ondersteuning voor ronde staven**

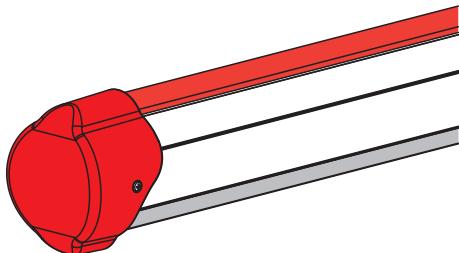


Fig. 01

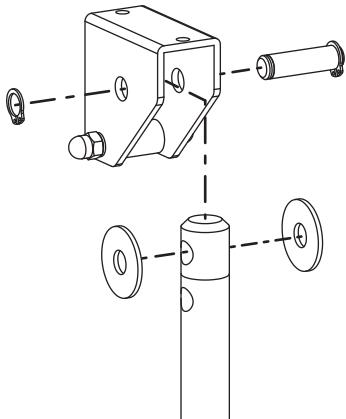


Fig. 02

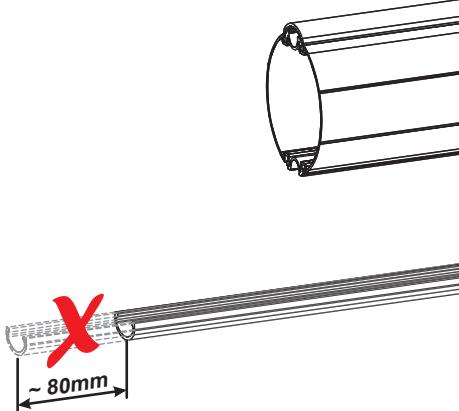


Fig. 03

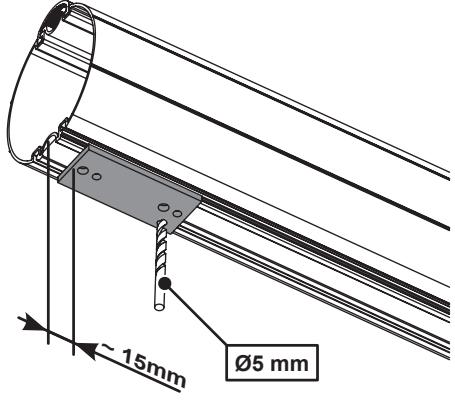


Fig. 04

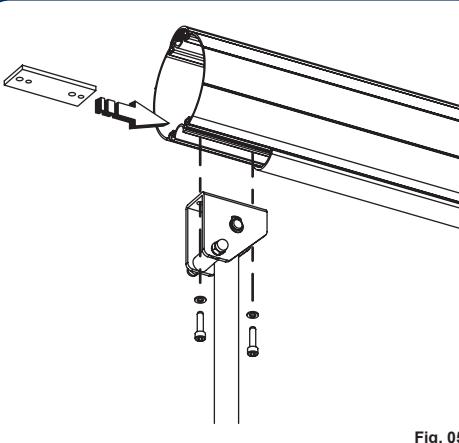


Fig. 05

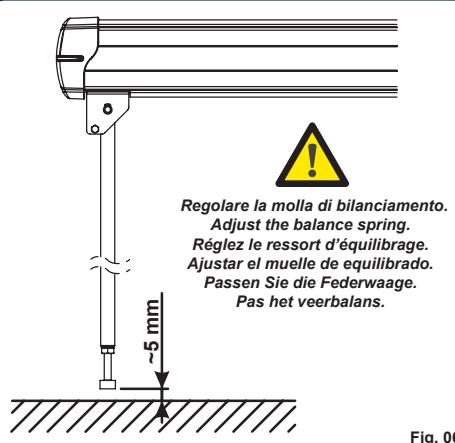


Fig. 06

**Regolare la molla di bilanciamento.  
Adjust the balance spring.  
Réglez le ressort d'équilibrage.  
Ajustar el muelle de equilibrio.  
Passen Sie die Federwaage.  
Pas het veerbalans.**

**Supporto mobile per asti rettangolari - Mobile support for rectangular rods - Support mobile pour des tiges rectangulaires - Soporte móvil para barras rectangulares - Mobile-Unterstützung für rechteckige Stangen - Mobiele ondersteuning voor rechthoekige staven**

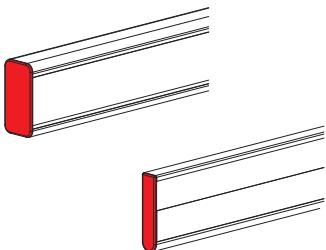


Fig. 01

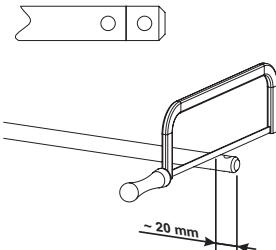


Fig. 02

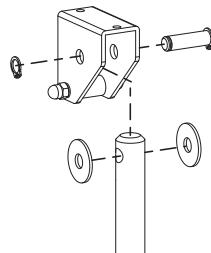


Fig. 03

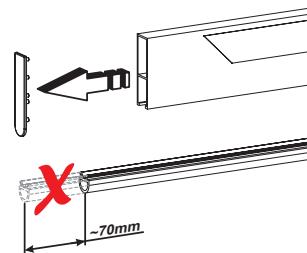


Fig. 04

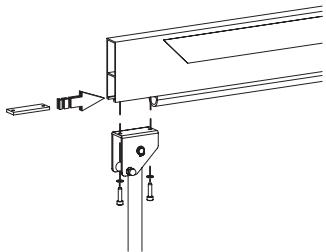


Fig. 05

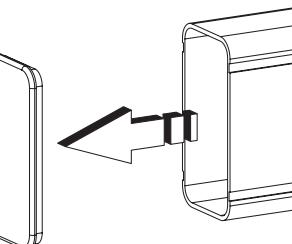


Fig. 06


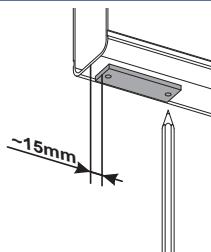


Fig. 07

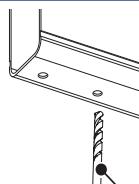

Ø5 mm

Fig. 08


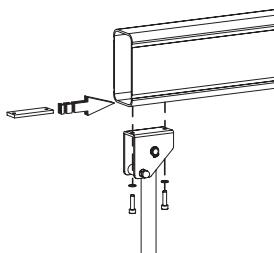


Fig. 09

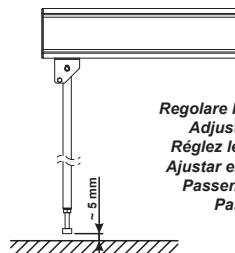

**Regolare la molla di bilanciamento.  
Adjust the balance spring.  
Régler le ressort d'équilibrage.  
Ajustar el muelle de equilibrado.  
Passen Sie die Federwaage.  
Pas het veerbalans.**

Fig. 10